


## Saitek Competition Game Clock (Blue Model)



1. Start/Stop
  - a. Buttons at the bottom control on/off, sound and light. Move the slider to LIGHTS OFF SOUNDS OFF. Other selections are (OFF / GO / SOUND OFF / LIGHTS OFF SOUND OFF)
2. Select mode 2B. With the clock turned on...
  - a. Use Up/down arrow buttons on the **4-way pad** (see right) to select mode 2B.
  - b. Default is 60 minutes for this setting. If you want G60/d5, press **PAUSE** button for 5 seconds to reset and start play. Read on for other instructions.



3. Enter Edit mode: Press the edit button.

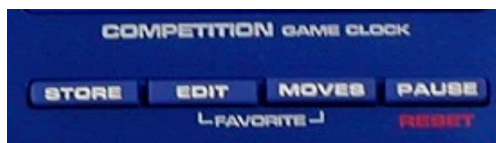

4. Change the time to 1:30:00 (90 minutes, choose other time settings as needed). All other settings should remain unchanged.

### In **edit** mode

- a) The digit to be modified will blink on the display.
  - b) The 4-way control pad is used to modify values and change cursor location
    - a. UP/DOWN will increase/decrease the value
    - b. LEFT/RIGHT will cycle through the settings
5. Save settings. (Optional) Press the STORE button to save. Only one setting can be saved in the device. It will save to mode 4A and exit edit mode.
  6. OR Exit Edit mode. Press EDIT button to exit edit mode
  7. Press PAUSE button for three seconds to reset and start play.

### Future Use:

1. Turn on the clock with the switch underneath the clock.
2. Select mode 7B using the 4-way pad. Left/right to go 1-7 and up/down to change A/B/C.
3. Press PAUSE button for three seconds to reset and start play.

### Additional time:

[TBD]